



# CC CAP PACK INSTALLATION

①

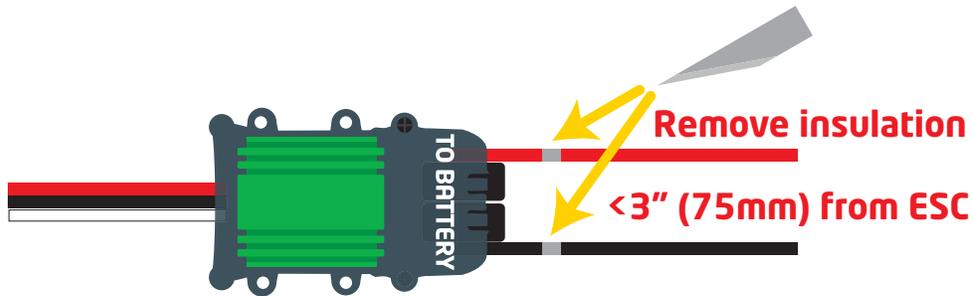


Remove 0.25 inches of insulation from the ESC's power wires within 3 inches of the ESC.

②

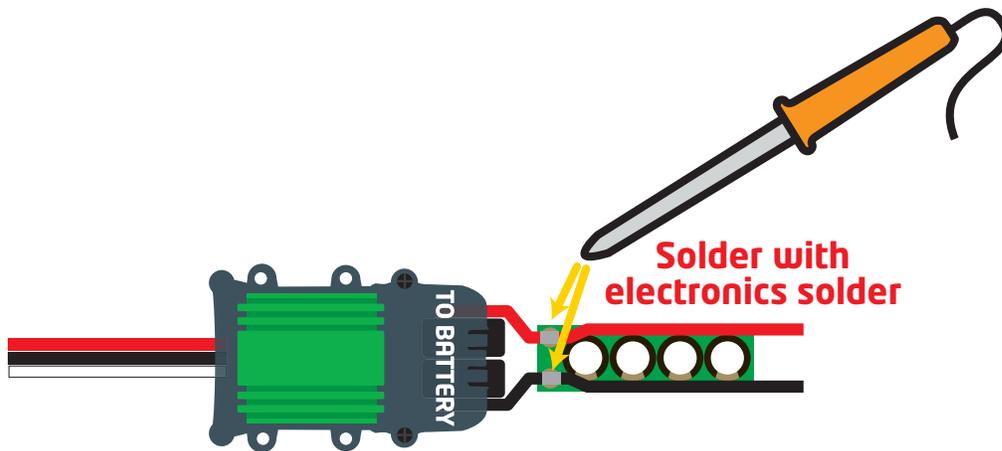

Solder the exposed power wires to the CC CapPack's posts using a high-power iron and electronics solder. Ensure that the RED wire is soldered to the (+) side and the BLACK wire is soldered to the (-) side.

③

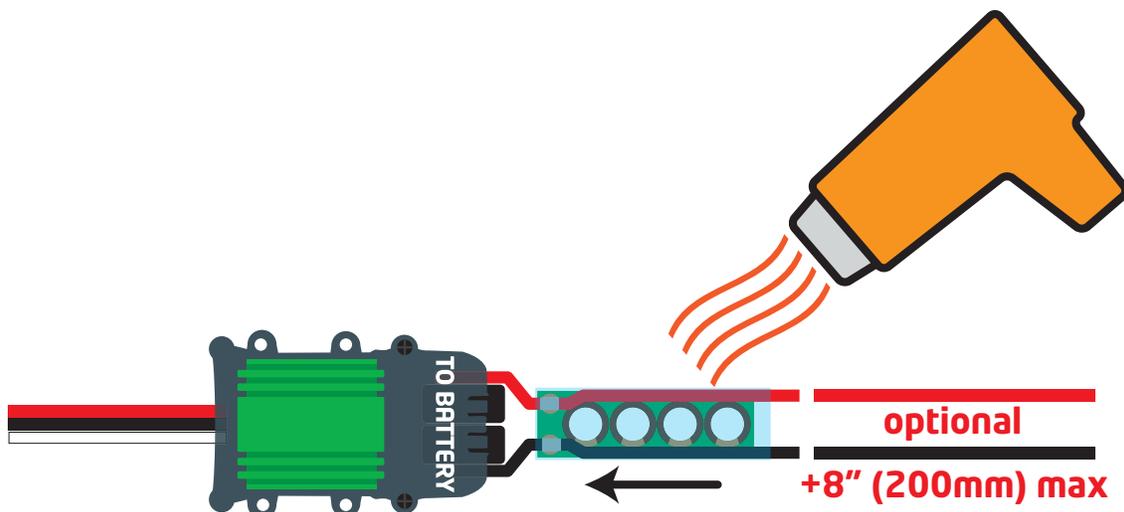

Slide the heat shrink over the CC CapPack and use a heat gun to shrink it. Up to 8 inches of additional wire may be added to the ESC wires.